


- Pairing: Press the pairing button on the remitter within 3seconds after receiver connected to the power supply, it's successfully paired when the output light flash three times.
  Unpairing:Long press(over3S) the pairing button on the remitter within 3seconds after
- 2.Unpairing:Long press(over3S) the pairing button on the remitter within 3seconds after receiver connected to the power supply, it's successfully unpaired when the output light flash three times.
- One receiver can be paired with multiple emitters, one emitter can be paired with max. eight receivers. (one receiver and one emitter already paired in production, pls do the multiple pairing and unpairing by yourself.)

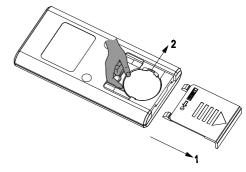

Indicating light quickly flashes when battery is low

- 1.Pull out the battery box
- 2.Change a new CR2032 cell battery